

5. Setup Codes for TV

Admiral	500, 614, 902, 615, 610, 501	Minutz	608
Advent	911, 932, 933	Mitsubishi	500, 104, 607, 617, 601
Aiko	900	Motorola	500, 802
Akai	601, 903, 922	MTC	903, 601, 617, 619, 103
AOC	601, 617, 103	Multitech	901
Apex	000, 618, 604	NAD	609, 607, 603
Audiovox	100, 901, 900, 101	NEC	601, 617, 619
Belcor	617	Nikko	601, 607, 900
Bell&Howell	620, 611	Noshi	800
Bradford	901	NTC	900
Brockwood	617	Olevia	923
Broksonic	902, 614	Onwa	901
Candle	601, 619	Optimus	620, 004, 603
Celebrity	605	Optonica	500, 610
Changhong	618	Orion	902, 614, 615
Citizen	903, 601, 619, 900	Panasonic	004, 202, 802, 610
Clairtone	103	Philco	301, 614, 601, 606, 617
Concerto	619	Philips	301, 302, 303, 601, 615, 617, 803, 905, 906, 907, 908, 909
Contec	901, 103	Pilot	601, 617
Craig	901	Pioneer	603, 600
Crosley 303, 301		Polaroid	400, 910, 913, 915, 917, 920
Crown	901	Portland	617, 900
Curtis Mathes	400, 301, 620, 100, 500, 903, 621, 606, 619, 611, 603, 102, 402, 401, 405	Prism	202
CXC	901	Proscan	400, 402
Daewoo	100, 617, 900, 101	Proton	607, 102
Daytron	617	Pulsar	700, 617
Dumont	700, 617	Quasar	004, 202, 610, 802
Durabrand	902, 901, 201, 614, 615, 914, 918	RadioShack	400, 620, 610, 901, 621, 607, 617, 619, 402
Electroband	605, 103	Realistic	620, 610, 901, 601, 607, 617, 619
Emerson	620, 902, 614, 901, 200, 201, 607, 617, 615, 602, 103, 101	RCA	400, 617, 800, 612, 600, 402, 403, 401, 404, 405, 623
Envision	601	Rhapsody	103
ESA	901, 201, 601, 903	Roomconx	614, 615, 902, 924
Fisher	620, 801	Runco	700, 601, 616
Fujitsu	615, 300	Sampo	601
Funai	901, 615, 201	Samsung	903, 601, 607, 617, 619, 930
Futuretec	901	Sansui	614, 902, 615
GE	400, 202, 100, 200, 607, 608, 802, 402, 401, 405	Sanyo	620, 801, 931
Gibraltar	700, 601, 617	Scotch	607
GoldStar	601, 607, 617, 619	Scott	902, 901, 607, 617, 615
Grundig	901, 615	Sears	400, 301, 620, 609, 607, 615, 622, 801, 201, 402
Haier	914, 918	Sharp	500, 610, 501, 929
Hallmark	607	Sharp (LCD)	912, 929
Harvard	901	Shogun	617
Hitachi	606, 619, 611, 005, 916	Signature	611
ILO	921, 925	Simpson	803
Infinity	301	Sony	605
Integ	700	Soundesign	901, 607, 615
Insignia	614, 303, 201, 301, 909, 919, 920, 934	Squareview	201
JBL	301, 000, 604, 618	SSS	901, 617
JCB	605	Starlite	901
JC Penny	400, 609, 202, 903, 601, 607, 608, 617, 800, 402, 405	Supreme	605
JVC	701	Sylvania	301, 601, 201, 901
KEC	901	Symphonic	901, 201
Kenwood	601, 617	Tandy	500
KLH	618	Tatung	802
KTV	901, 601, 103	Technics	004, 202
Konka	904, 001, 304, 002, 003	Techwood	202, 619
LG	619, 910, 700	Teknika	301, 901, 104, 605, 617, 615, 619, 611, 900
Lasko	611	TMK	607, 619, 602
Luxman	619	Toshiba	620, 609, 903, 613
LXI	400, 301, 620, 609, 607, 402	Trutech 101	
Magnavox	301, 302, 303, 601, 615, 617, 803, 905, 906, 907, 908, 909	Victor	701
Majestic	611	Vidtech	607, 617
Marantz	301, 601	Vizio	927
Matsushita	004	Wards	301, 610, 601, 607, 608, 617, 615, 619, 611
Megatron	607, 606	Westinghouse	926, 928
MEI	103	White Westinghouse	614, 101, 605
Memorex	620, 004, 614, 104, 607, 615, 611	Yamaha	601, 617
MGA	104, 601, 607, 617, 500	Zenith	700, 614, 611, 900, 619